

DLMS4080 - Locating installed firmware version

Follow this procedure to locate the firmware version number in your DLMS4080.

- 1) Turn on your DLMS4080
- 2) View the LCD screen on the front panel of your DLMS4080
- 3) The following screen will appear showing the presently loaded firmware version.

